



Catalogo Parti Di Ricambio

Spare Parts List

Catalogue Pieces De Rechange

Ersatzteilkatalog

www.logus-carraro.ru

ASSALE 26.20M

AXLE 26.20M

PONT 26.20M

ACHSE 26.20M

REF. 139275

**INDICE
INDEX
INDEX
INDEX**

1.0.1 Corpo assale
Axle housing
Corps du pont
Achsgehäuse

1.1.1 Corpo assale
Axle housing
Corps du pont
Achsgehäuse

2.0.1 Calotte e cilindro di sterzo
Swivel housing and steering cylinder
Calottes et verin de direction
Gelenkgehäuse und Lenkzylinder

3.0.0 Coppia conica
Bevel gear/pinion set
Couple conique
Kegel- und Tellerrad

4.0.0 Differenziale
Differential
Différentiel
Differential

5.0.1 Freni
Brakes
Freins
Bremsen

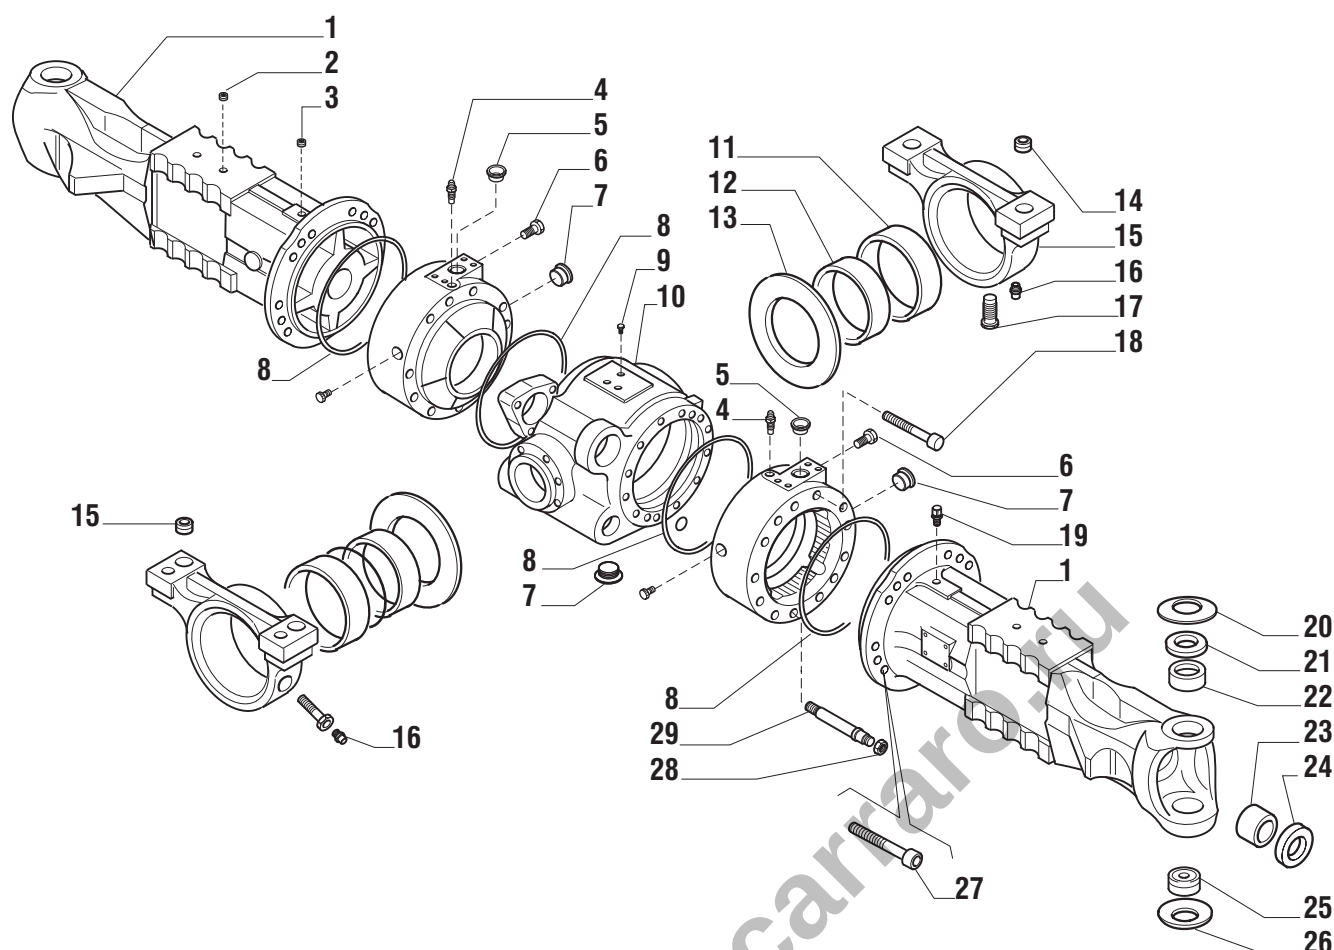
6.0.1 Doppio giunto
Double joint
Double joint
Antriebswellen

7.0.1 Mozzo ruota
Wheel hub
Moyeu de roue
Radnabe

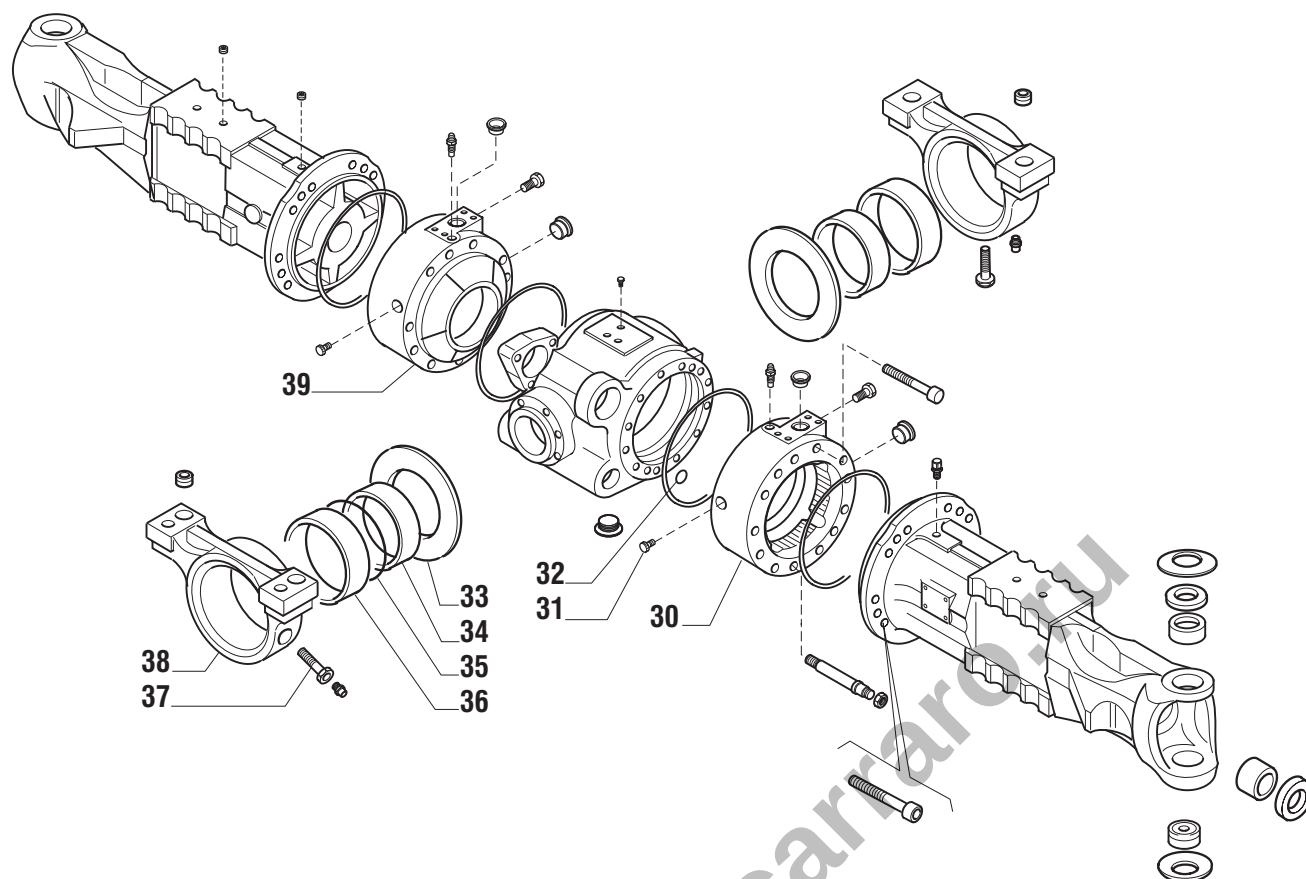
8.0.0 Riduzione epicicloidale
Epicycloidal reduction gears
Réduction épicycloidal
Satellitengetriebe

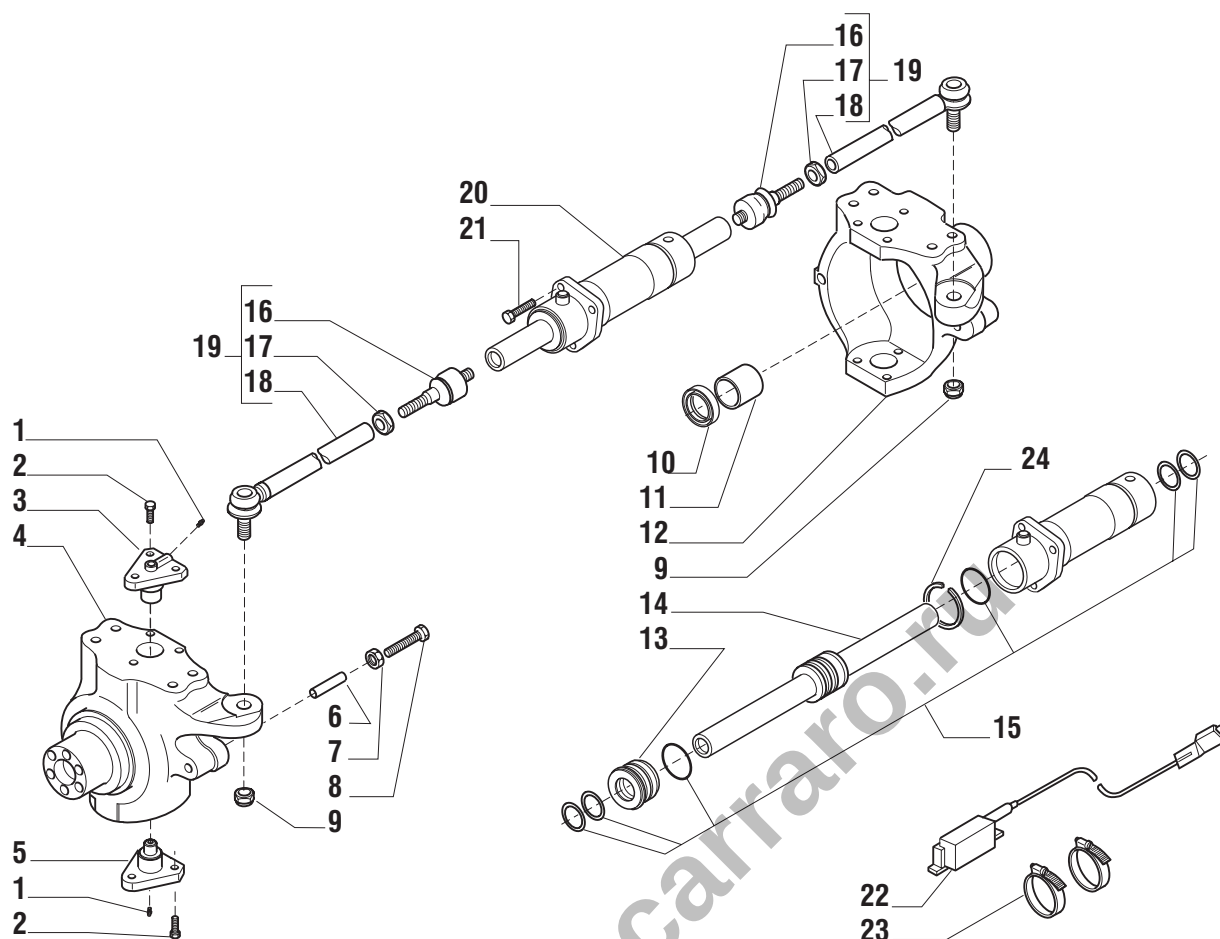
9.0.0 Sommario kit
Kit summary
Sommaire kit
Ersatzteil-Sets

**This catalogue is valid from serial number 101.
Ce catalogue est valable à commencer du numéro 101.
Der vorliegende katalog ist gültig ab Serienmr. 101.
Il presente catalogo è valido a partire dal N° di matricola 101.**



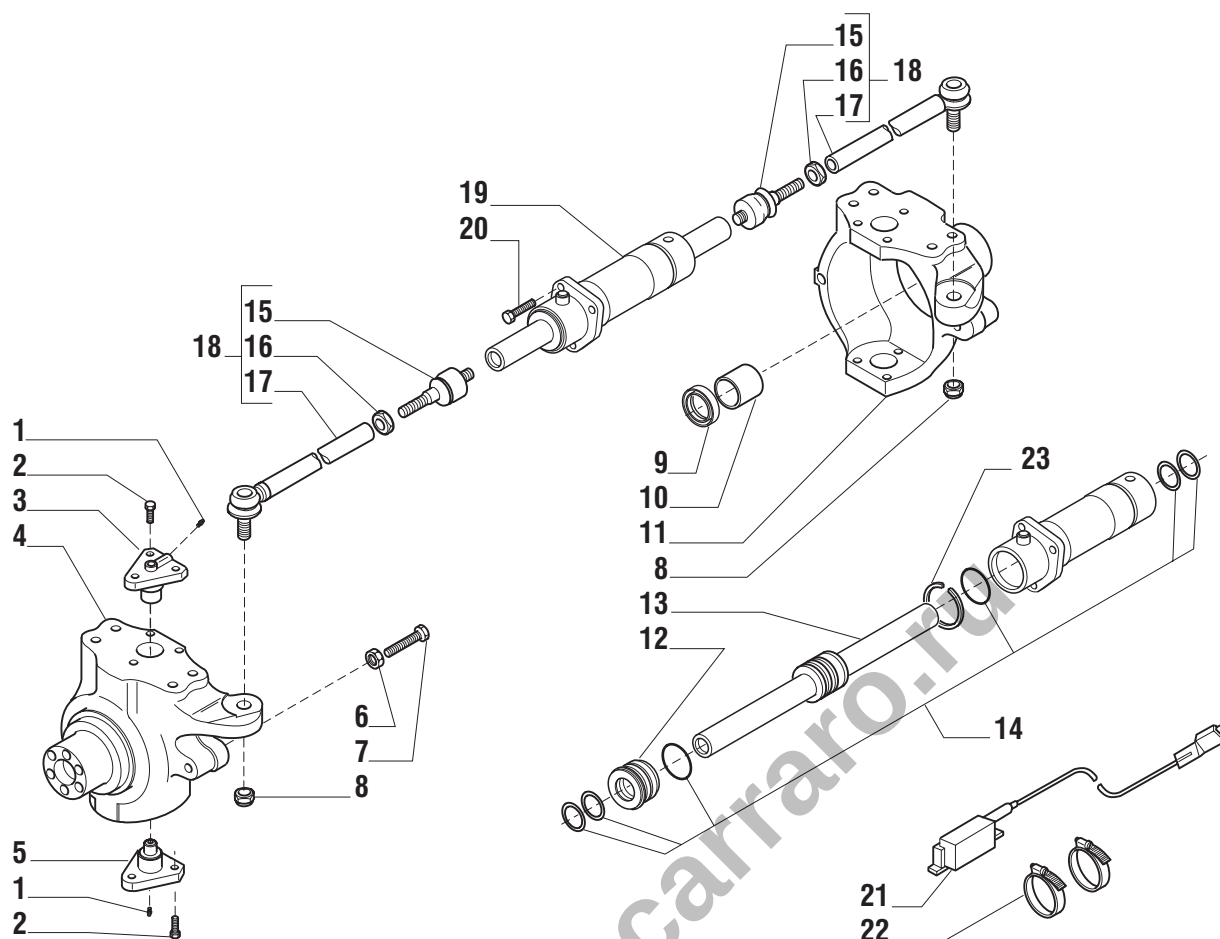
Pos.	Ref.	Q.ty	Descrizione	Description	Kit	From S/N	To S/N	Note
1	140611	2	Tromba trave	Beam trumpet				
2	021494	4	Tappo M10x1.5	Plug M10x1.5				
3	021558	1	Tappo M10x1	Plug M10x1				
4	116792	2	Sfiato M10x1	Breather M10x1				
5	134522	2	Tappo D26x8	Plug D26x8				
6	138442	2	Vite M8x23.5	Bolt M8x23.5				
7	125280	3	Tappo M30x2	Plug M30x2				
8	028562	4	Anello OR	O.ring				
9	030732	3	Tappo M8	Plug M8				
10	139372	1	Corpo centrale	Central body				
11	132512	1	Boccola	Bush				
12	131762	1	Boccola	Bush				
13	131763	1	Ralla	Thrust washer				
14	134714	1	Supporto anteriore	Front support				
15	116529	4	Bussola	Bush				
16	024258	1	Ingrassatore M8x1	Greaser nipple M8x1				
17	141446	1	Vite M16	Bolt M16				
18	021334	2	Vite M12x110	Bolt M12x110				
19	104988	1	Sfiato M10x1	Breather M10x1				
19	137474	1	Sfiato M10x1	Breather M10x1				
20	128633	2	Molla tazza	Belleville washer				
21	131265	2	Spessore	Spacer				
22	123641	2	Boccola	Bush				
23	118547	2	Bronzina	Bush				
24	116723	2	Anello di tenuta	Seal ring				
25	123726	2	Rotula sferica	Spherical bearing				
26	128630	2	Molla tazza	Belleville washer				
27	021364	22	Vite M16x150	Bolt M16x150				
28	022128	2	Dado M16x2	Nut M16x2				
29	139147	2	Prigioniero M16x2	Stud M16x2				

[illegible]

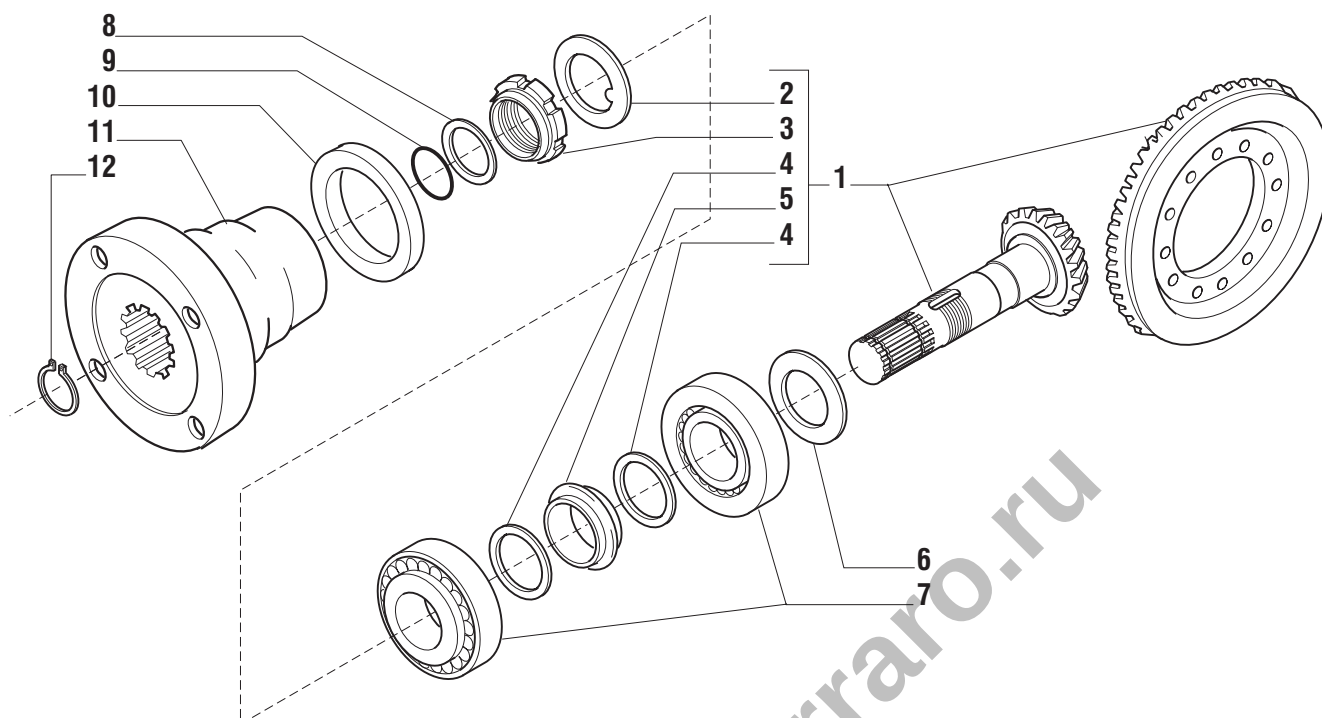


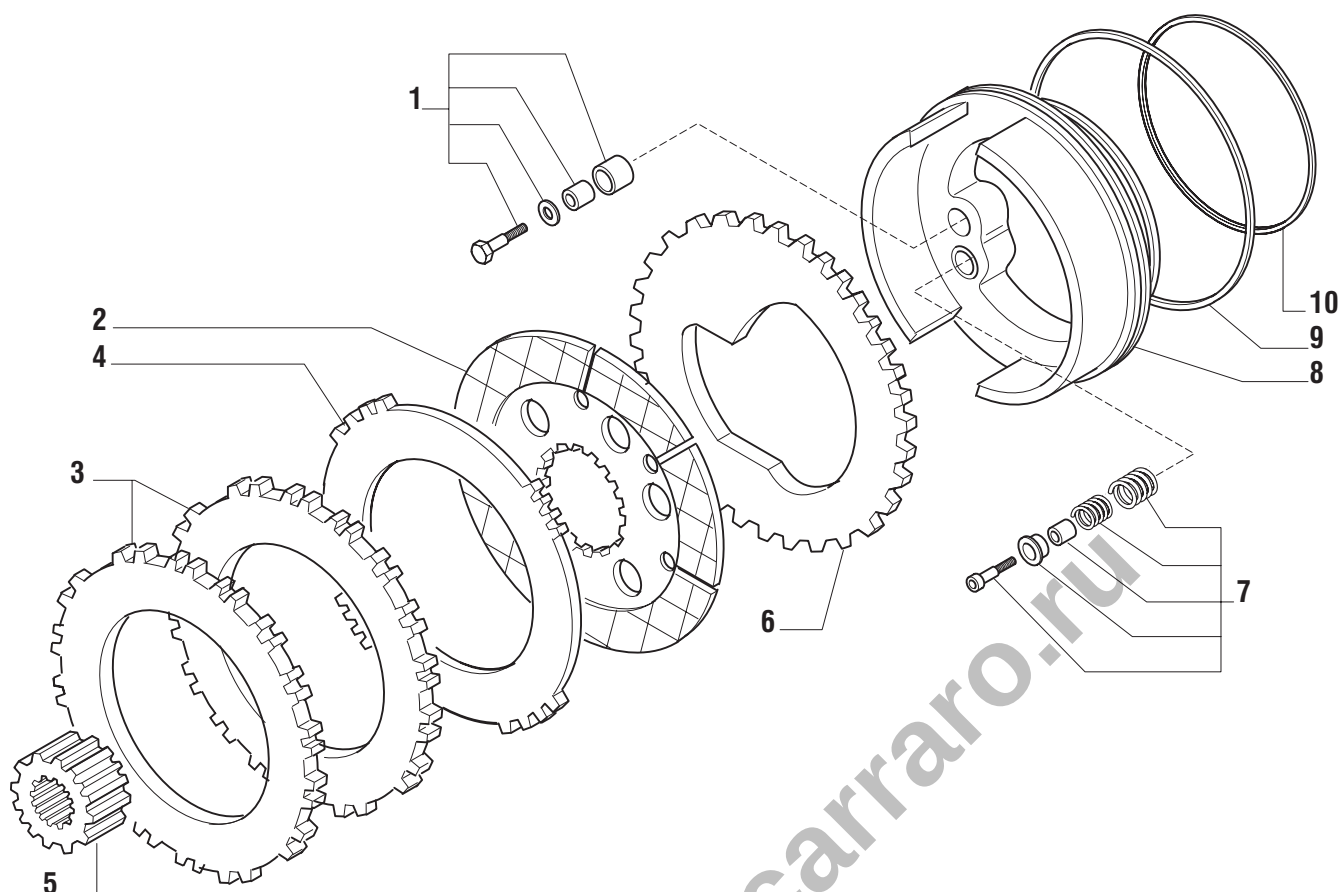
Pos.	Ref.	Q.ty	Descrizione	Description	Kit	From S/N	To S/N	Note
1	024210	4	Ingrassatore M6x1	Greaser nipple M6x1				
2	126922	12	Vite M14x35 (Atbl)	Bolt M14x35 (Atbl)				
3	128880	2	Perno snodo	King pin				
4	139203	1	Calotta SX	Swivel housing LH				
5	128881	2	Perno snodo	King pin				
6	143040	4	Bussola fermo sterzata	Bush				
7	022129	4	Dado M16	Nut M16				
8	143041	4	Vite M16x140	Bolt M16x140				
9	022431	2	Dado M20x1.5	Nut M20x1.5				
10	123208	1	Anello tenuta	Seal ring				
11	125390	2	Bronzina	Bush				
12	139202	1	Calotta DX	Swivel housing RH				
13	049138	1	Testata martinetto	Cylinder head				
14	049074	1	Stelo	Rod				
15	049226	1	Kit guarnizioni	Oil seal kit				
16	049013	1 *	Snodo sferico	Ball joint				
17	070787	1 *	Dado M24x1.5	Nut M24x1.5				
18	049029	1 *	Tirante snodo	Tie rod				
19	135578	2	Asta di guida	Steering arm assy				
20	137177	1	Martinetto	Steering cylinder				
21	128534	3	Vite M12x45	Bolt M12x45				
22	137179	1	Sensore	Sensor				
23	028352	2	Fascetta	Clamp				
24	049123	1	Banda magnetica	Magnetic band				

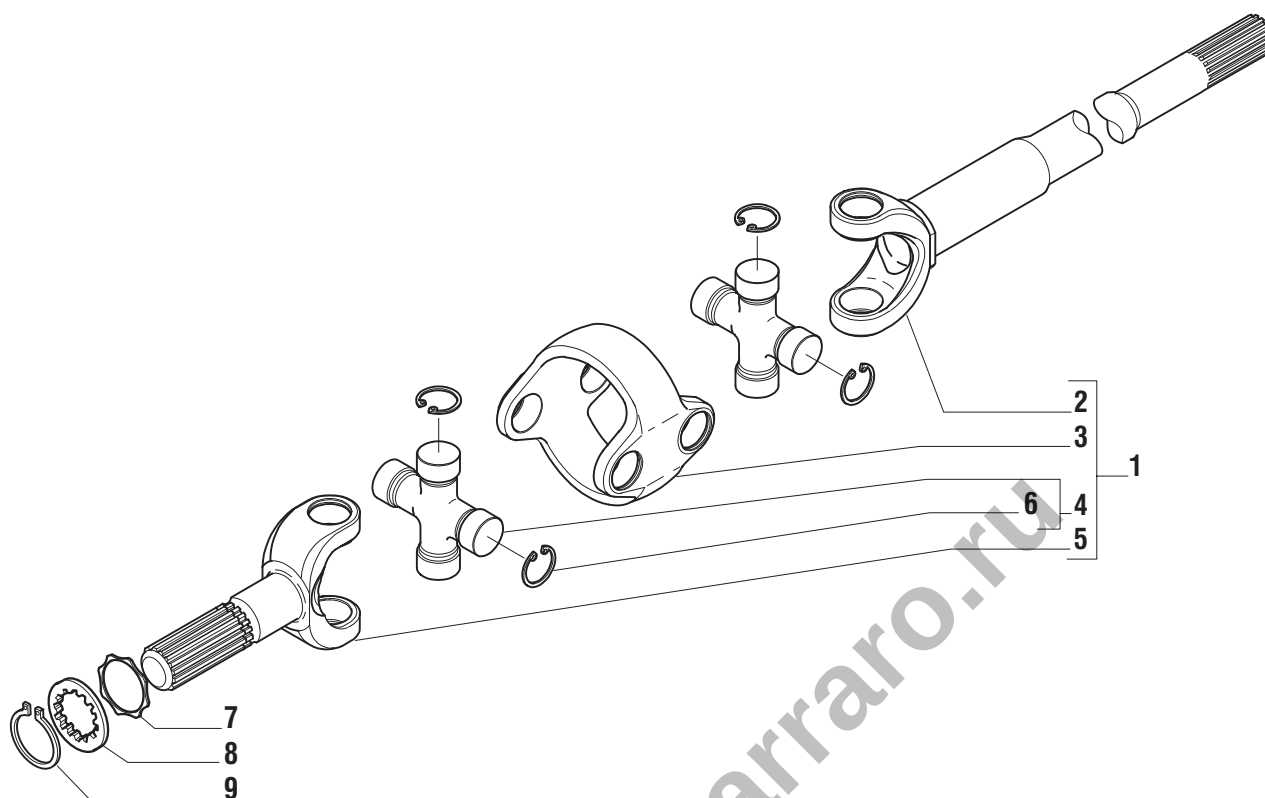
* Q.ty valid only for one steering arm assy.

[illegible]

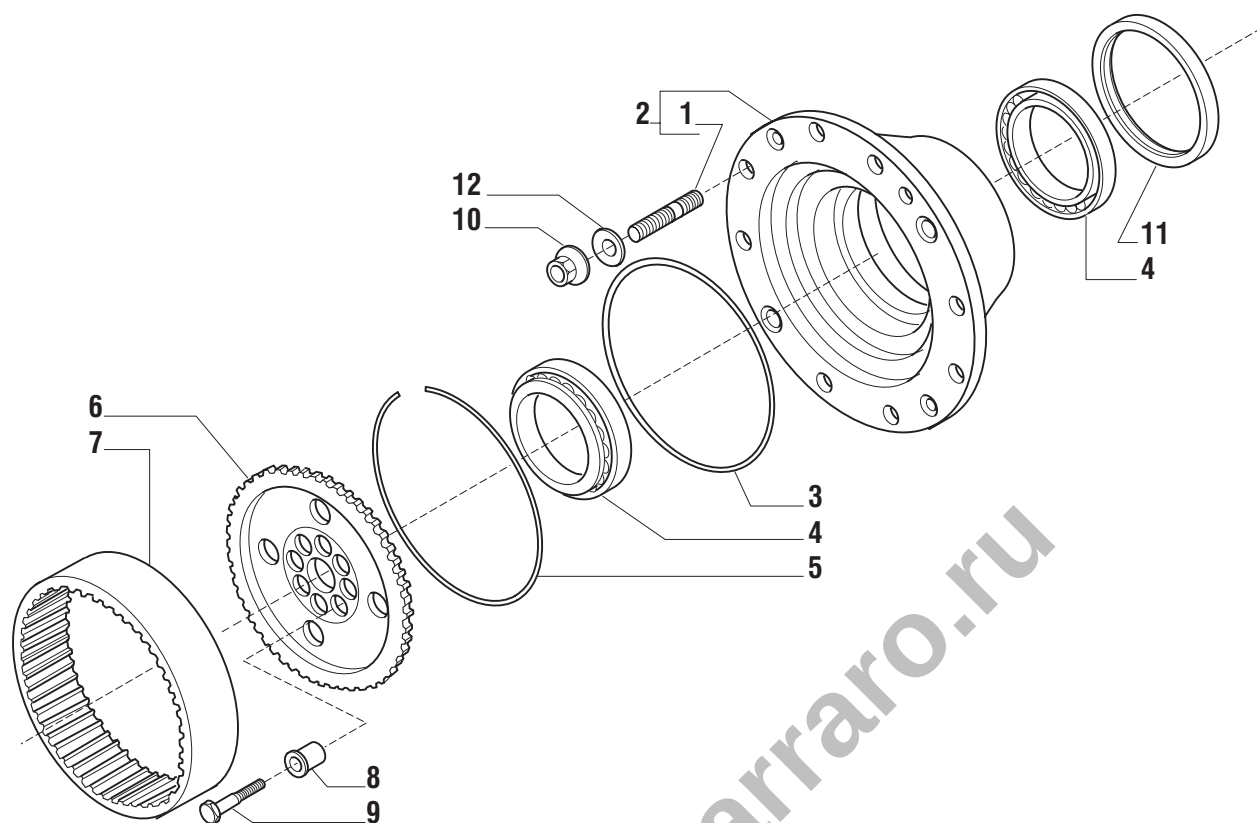
* Q.ty valid only for one steering arm assy.

[illegible]

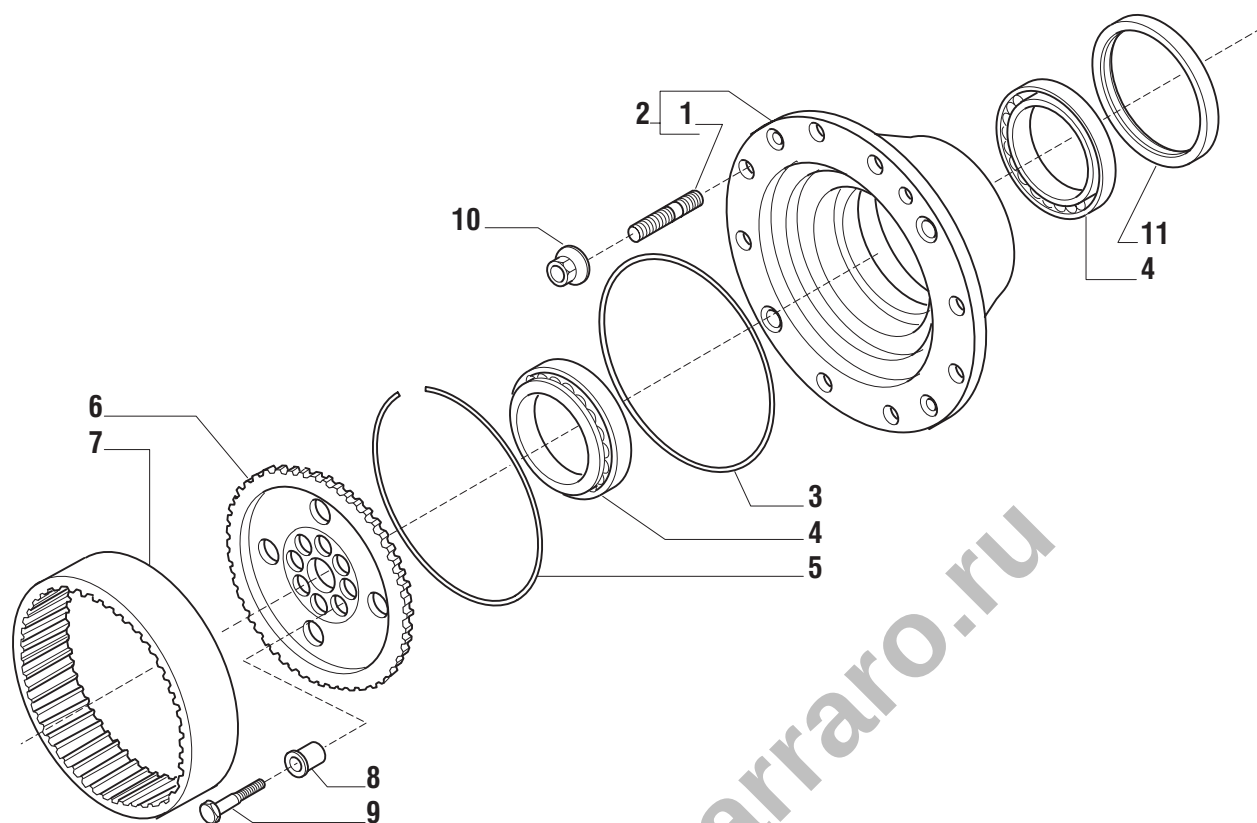
[illegible]

[illegible]

* Q.ty valid only for one double joint.

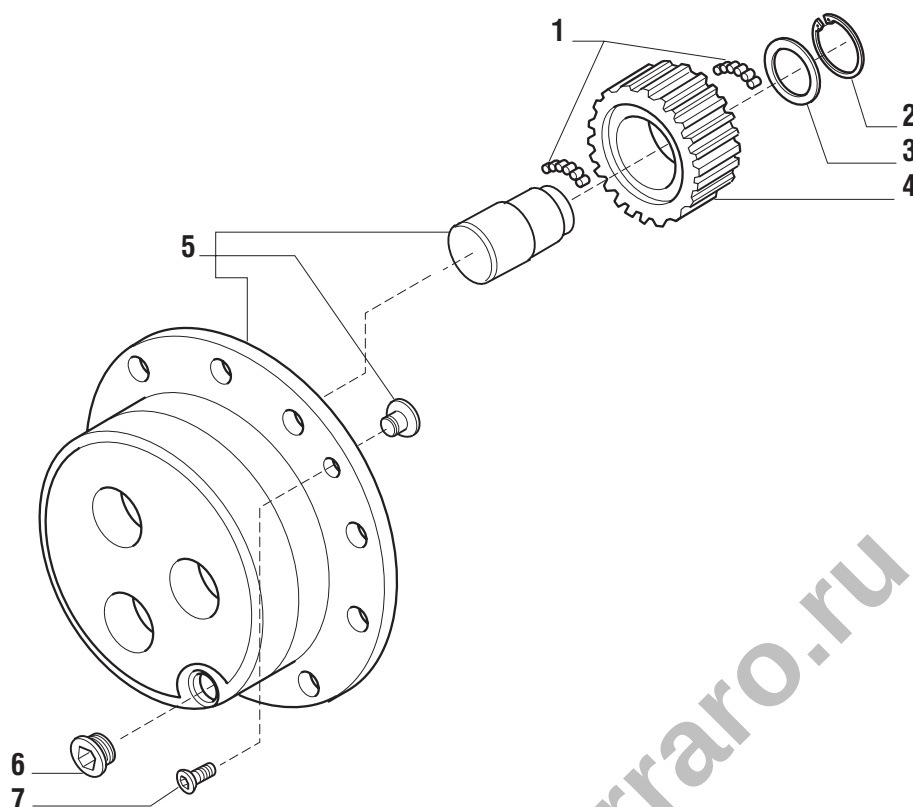
[illegible]

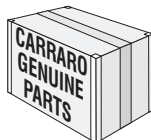
* Q.ty valid only for one wheel hub assy.



Pos.	Ref.	Q.ty	Descrizione	Description	Kit	From S/N	To S/N	Note
1	130679	8*	Prigioniero	Stud	066304			
2	066304	2	Kit mozzo ruota	Wheel hub kit				
3	028603	2	Anello OR	O.ring				
4	118370	4	Cuscinetto	Bearing				
5	125344	2	Anello	Lockring				
6	134298	2	Mozzo fermo corona	Wheel carrier				
7	134299	2	Corona epicicloidale	Crown gear				
8	141196	16	Bussola centraggio	Centering bush				
9	140259	16	Vite M12x45	Bolt M12x45				
10	121746	16	Dado M18x1.5	Nut M18x1.5				
11	047705	2	Tenuta a cassetto	Oil seal ring				

* Q.ty valid only for one wheel hub assy.

[illegible]



Kit ref.	Ref.	Descrizione	Description	Q.ty	From S/N	To S/N	Note
066761	-	Kit coppia conica	Bevel gear/pinion set	-			
-	-	Coppia conica Z=15/31	Bevel gear/pinion Z=15/31	1			
-	125829	Rondella 50x40.5x2	Washer 50x40.5x2	2			
-	125806	Distanziale elastico	Collapsible spacer	1			
-	115054	Ghiera serraggio M40x1.5	Ring nut M40x1.5	1			
-	113717	Rondella fermo ghiera	Lockwasher	1			
066161	-	Kit ingranag. differenziale	Differential kit	-			
-	115730	Rondella spallamento	Thrust washer	4			
-	115731	Perno	Shaft	2			
-	120361	Controdisco	Drive plate	2			
-	116451	Spina	Pin	1			
-	-	Ingranaggio Z=12	Gear Z=12	2			
-	-	Ingranaggio Z=18	Gear Z=18	2			
066304	-	Kit mozzo ruota	Wheel hub kit	-			
-	130679	Prigioniero	Stud	8			
-	-	Mozzo ruota	Wheel hub	1			
066285	-	Kit treno portasatelliti	Planetary carrier assy	-			
-	-	Pattino d'arresto	Locking pad	1			
-	-	Treno portasatelliti	Planetary carrier	1			
-	-	Perno	Shaft	3			
066674	-	Kit self-adjust	Self-adjust kit	-			
-	-	Molla	Spring	3			
-	-	Vite M6x35	Bolt M6x35	3			
-	-	Molla	Spring	3			
-	-	Coperchio molla	Spring cover	3			
-	-	Bussola	Bush	3			
066675	-	Kit self-adjust	Self-adjust kit	-			
-	-	Spina	Pin	3			
-	-	Bussola	Bush	3			
-	-	Vite M6x35	Bolt M6x35	3			
-	-	Rondella	Washer	3			